

Changing the Coloured Wrap

NovaRugged™ 10 · 1st Generation

NovaRugged™ 10.1


The coloured wrap protects your NovaRugged™ device. It was made to fit tightly and stay on once attached. You will need to stretch the wrap to fit it over the device.

To remove the old wrap:

1. Pull one of the bottom corners of the old, coloured wrap off the device.
2. Pull the other bottom corner off the device.
3. Pull the sides of the wrap away from the device.
4. Pull the top of the wrap **straight up** over the power and volume buttons until the wrap is off the device.

To attach the new wrap:

1. Align the holes in the top of the wrap with the device power and volume buttons.

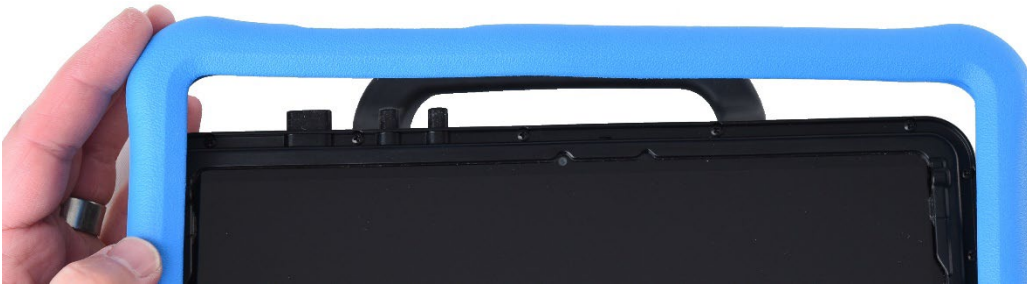

2. Push the corner of the wrap onto the device.
3. Pull the other top corner onto the device.




4. Pull one of the bottom corners of the wrap over the bottom corner of the device. You will need to stretch the wrap to pull it into place.

5. Pull the other bottom corner of the wrap over the bottom corner of the device. You will need to stretch the wrap to pull it into place.



6. Push the sides of the wrap into place. You may need to rock the wrap over the plastic lip on the back of the case to ensure the wrap fits tightly against the device.

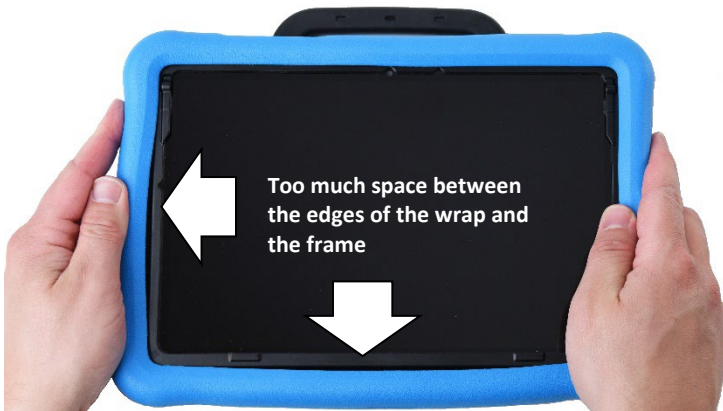

7. Make sure the top, bottom, and sides of the wrap fit tightly against the device.

Too much space between edges of wrap and frame:



Correct amount of space between edges of wrap and frame:



Top, bottom, and sides of wrap fit tightly against device:

